



Specifications

Model	SpeedyBee Nano 915MHz RX
Name	ExpressLRS 915MHz Receiver
Frequency	915MHz
Antenna	T-antenna (138*104mm, 3g)
Chip	SX1276+ESP8285
Power	50mW
Input voltage	5V
Antenna connector	IPEX1
Weight	0.7 gram(without antenna)
Dimension	11mm*17mm
Default Firmware	SpeedyBee Nano 915MHz RX 3.4.2

Light indicator

Double red blinking	binding
Slow red blinking	powering up but unlinked, no packages received from the transmitter
Solid red	receiver is connected, with signal received
Fast red flashing	Wi-Fi is turned on, and updating via Wi-Fi is available

PS.

To turn on Wi-Fi, wait for 60 seconds after powering on or long press button for 3 seconds
Quick to cut off the power 3 times, it enters the binding mode